

# Tech Note

---

**Title:** Using an RCXT load cell with a Konecranes Control Pro

**Product :** RCXT Load cells

**Author:** PK

**Date:** 7/5/2019

## 1 DESCRIPTION

The Konecranes Control Pro and SWF Novamaster utilise an external amplifier module (part number KAE400) to convert the millivolt load cell signals to a 0-10V output that is fed to the unit.

It is possible to use a SoleDigital RCXT load cell with this equipment .

Both the gain and bridge switches must be set as shown below and the Novamaster or controlpro must be recalibrated after installation.

## 2 PICTURES

