



## Importing Calibrations

The FSU now supports importing calibrations from one device to another. You might want to do this if you are replacing a device, or need to use a MaxOut to implement a wireless link.


Nb.

Liftlog™DX and MaxOut DX only import calibration files from other Liftlog™DX's and/or MaxOutDX's.  
HB200 can only import calibrations from other HB200

Before you begin, make sure you have previously connected to the Liftlog or MaxOut that you want to copy the calibration from. Doing this saves the calibration of that device to your computer, and this is where the FSU will fetch it from when you ask it to import a calibration into a new device.


Connect to the MaxOut/Liftlog/HB200 that you want to import the calibration *to*.

Right click the **Calibrate** button and select **From File**

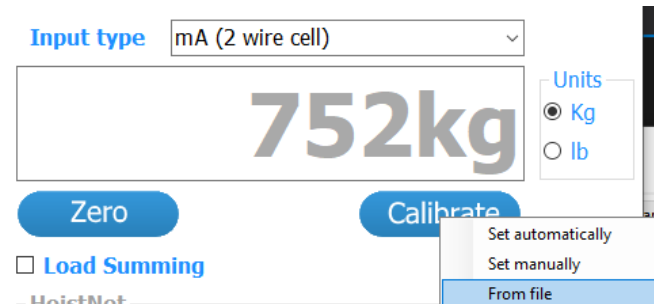

Select the device you want to import calibration *from*.

Click **Open**

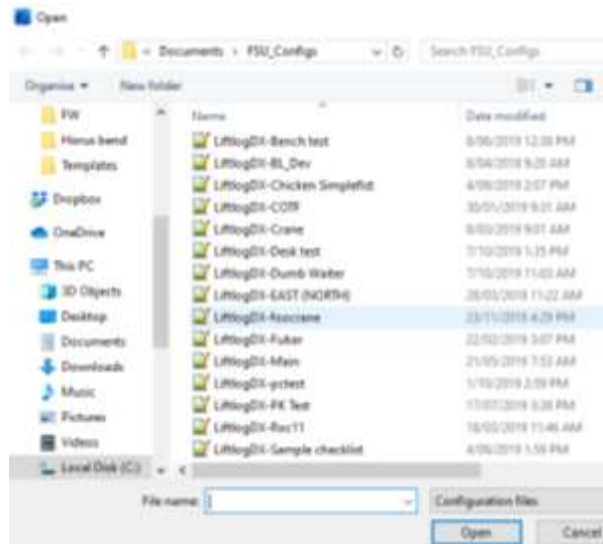

After a successful import you will receive a **Calibration Import Successful** notification

